


Replacing the Impeller

Using your thumbs press **FIRMLY** on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

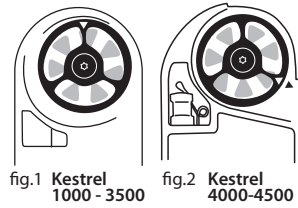


Rev'd 07/07/11

Replacing the Impeller

Using your thumbs press **FIRMLY** on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

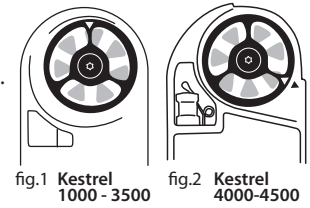


Rev'd 07/07/11

Replacing the Impeller

Using your thumbs press **FIRMLY** on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

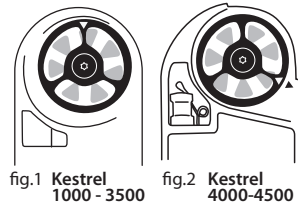


Rev'd 07/07/11

Replacing the Impeller

Using your thumbs press **FIRMLY** on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

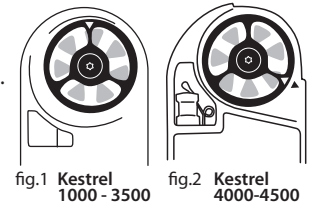


Rev'd 07/07/11

Replacing the Impeller

Using your thumbs press **FIRMLY** on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

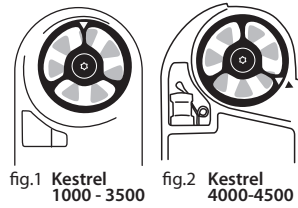


Rev'd 07/07/11

Replacing the Impeller

Using your thumbs press **FIRMLY** on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

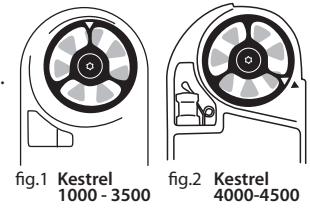


Rev'd 07/07/11

Replacing the Impeller

Using your thumbs press **FIRMLY** on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

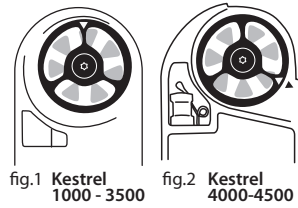


Rev'd 07/07/11

Replacing the Impeller

Using your thumbs press **FIRMLY** on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

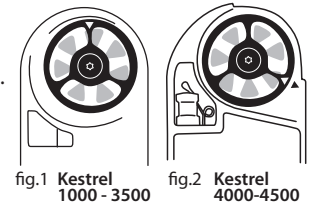

Rev'd 07/07/11